


Medidas tuercas KM

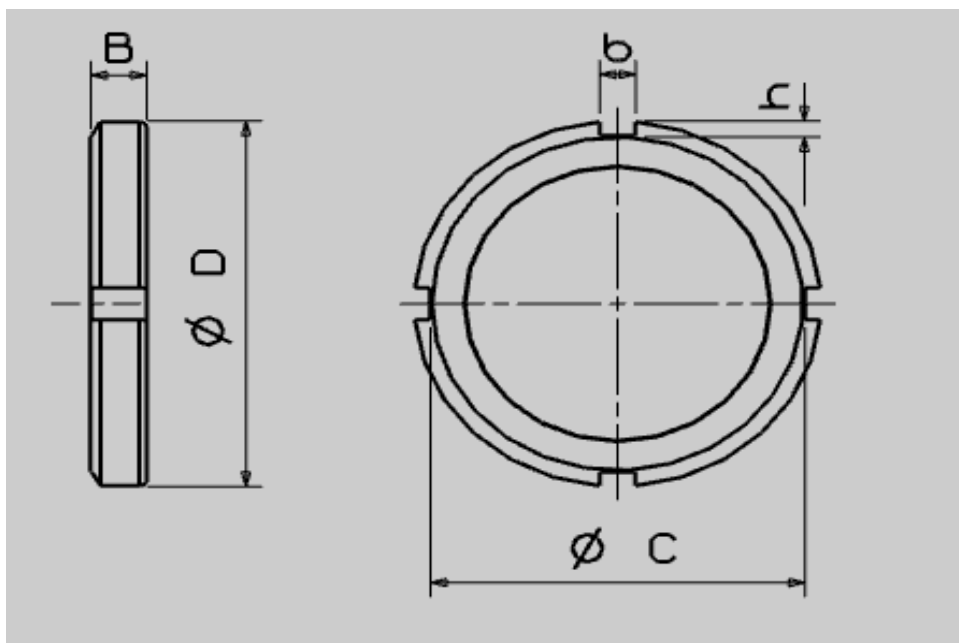

KM	Rosca	ØD	B	C	b	h
0	M-10X1	18	4	13,7	3	2
1	M-12X1	22	3,8	17,8	3	2
2	M-15X1	25	5	20,7	4	2
3	M-17X1	28	5	23,7	4	2
4	M-20X1	32	6	28	4	2
5	M-25X1,5	38	7	34	5	2
6	M-30X1,5	45	7	41	5	2
7	M-35X1,5	52	8	48	5	2
8	M-40X1,5	58	9	53	6	2,5
9	M-45X1,5	65	10	60	6	2,5
10	M-50X1,5	70	11	65	6	2,5
11	M-55X2	75	11	69	7	3
12	M-60X2	80	11	74	7	3
13	M-65X2	85	12	79	7	3
14	M-70X2	92	12	85	8	3,5
15	M-75X2	98	13	91	8	3,5
16	M-80X2	105	15	98	8	3,5
17	M-85X2	110	16	103	8	3,5
18	M-90X2	120	16	112	10	4
19	M-95X2	125	17	117	10	4
20	M-100X2	130	18	122	10	4
21	M-105X2	140	18	130	12	5
22	M-110X2	145	19	135	12	5

A partir de la KM4
la rosca es el numero de la KM
X 5

Ejemplo:
KM12 12x5=60 es M60

La cota B aunque en otras
tuercas sea más grande no
importa, la llave vale.