


DESPIECE/DIAGRAM DE/OF M1280N/M1200PRO

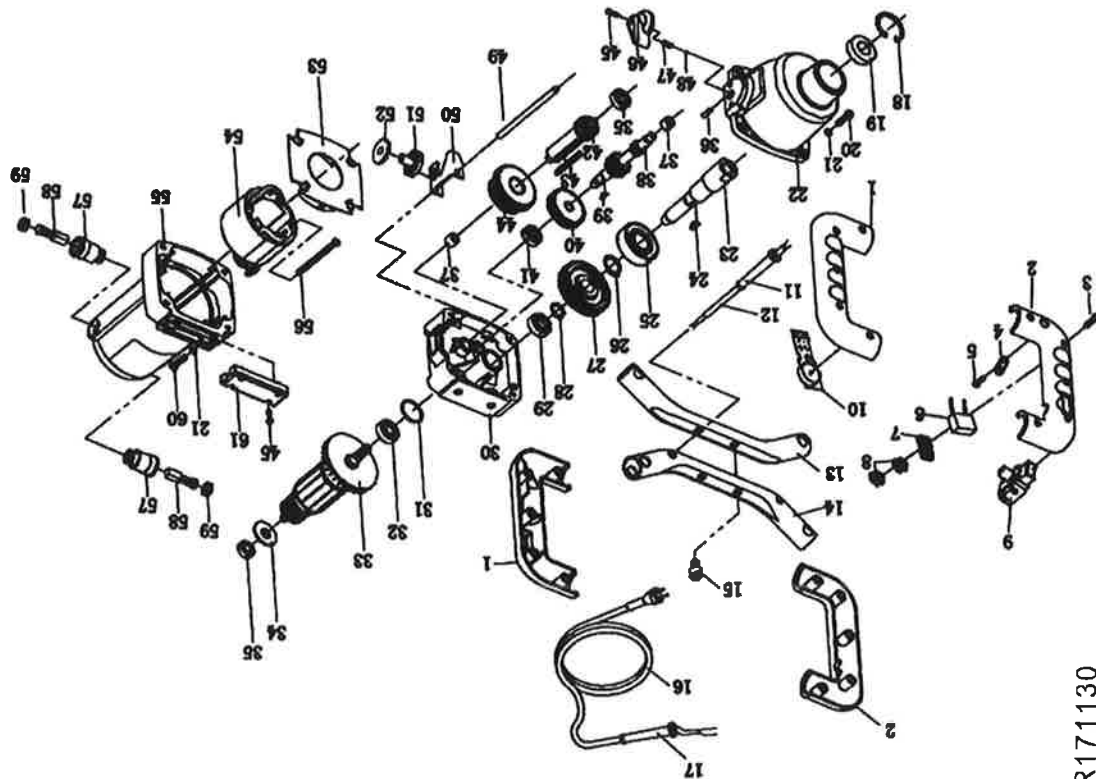

R171130

PARTS LIST FOR M1280N/M1200PRO. (See diagram)

Pos.	Description	Pos.	Description
1	Right Handle	32	Bearing 6000 2RS
2	Left Handle	33	The rotor
3	Screw ST3.9X22	34	M insulation gasket
4	Clamp	35	Ball bearing 608 zz
5	Screw ST3.5X16	36	Pin 4*14
6	Capacitance	37	Needle bearing HK0810
7	The inductance	38	The second active gear shaft
8	Round inductance	39	Hemicycle key2.5X3.7X10
9	Switch	40	Motor gear
10	Circuitry board	41	ball bearing 698 zz
11	Sleeve (M)	42	The third active gear shaft
12	Cable	43	Parallel key 4x4x45
13	Steel pipe (no hole)	44	Spindle double gear
14	Steel pipe (a hole)	45	Screw ST3X16
15	Screw M8X12	46	Lever
16	Cord	47	Spring Ø 0.5* Ø 3.9*L12
17	Sleeve (Big)	48	Ball Ø 4
18	Safety ring Ø 35	49	Pivot Ø 6*76
19	Dust cover	50	Coulisse
20	Screw M5X20	51	Partial core + eccentric wheel core
21	Spring washer Ø 5	52	Every ring
22	Bearing cover	53	Airguide shim
23	Spindle	54	The stator (including the brush ring)
24	Hemicycle key4X5X12	55	Chassis
25	Bearing 6003 ZZ	56	Screw ST4X70
26	Safety ring Ø 17	57	Brush holder
27	Spindle gear	58	Carbon brush 6.5*9*17
28	Safety ring Ø 15	59	Brush cap
29	Bearing 62900ZZ	60	Screw M5X25
30	Gear box	61	Clamp
31	Sealring Ø 25.8*1.8		