


DESPIECE/ DESMONTAGEM / DÉCOUPE / EXPLODED VIEW.

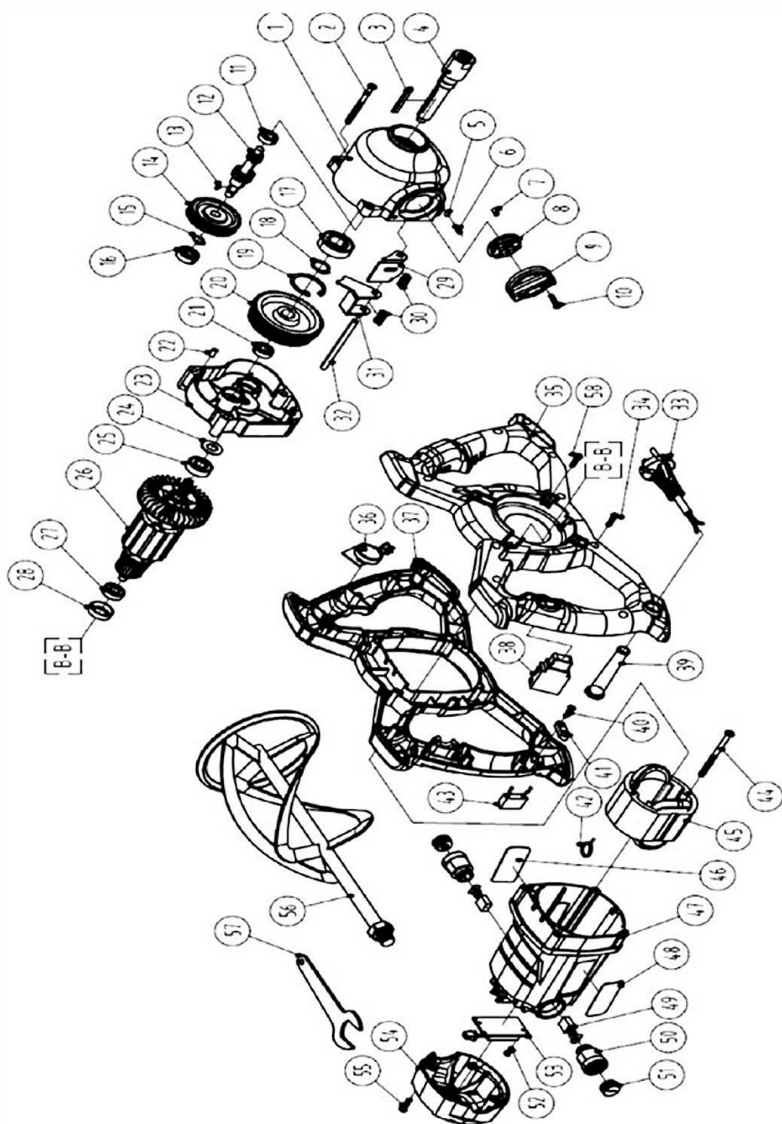

LISTA DE COMPONENTES/ LISTA DE COMPONENTES/ LISTE DES COMPOSANTS / PART LIST

Pos.	Descripción/Oescric3o/Description/Description.	Cant./Qty.
1	Cubierta rodamiento/Capa l'olamento/Couvercle palier/BearinR, cover.	1
2	Tornillos/Parafusos/Des vis/Screws (ST5X55).	4
3	Llave paralela/Chave paralela/Ciê parallele/Parallel key.	1
4	Huso/Fuso/Broche/Spindle.	1
5	Fijador/Fixador/Fixateur/Bail 0 5.	1
6	Muelle/Mola/Ressort/Sprin1ç.	1
7	Pivote/Pivó/Pivot/Pivot.	1
8	Pivote/Pivó/Pivot/Pivot.	1
9	Selector marcha/Seletor marcha/Sélecteur vitesse/Gear selector.	1
10	Tornillos/Parafusos/Des vis/Screws (ST4X14).	2
11	Rodamiento/Rolamento/Palier/Bearing (698).	1
12	Eje secundario/Eixo secundário/Arbre secondaire/Countershaft.	1
13	Hemiciclo/Hemiciclo/Hémicycle/Hemicycle. (2,5*3,1*10).	1
14	Engranaje motor/Engrenagem motor/Équipement motor/Motor gear.	1
15	Anillo de seguridad/Anel de seguranta/Anneau de sécurité/Safetv ring. Ull 10*1j.	1
16	Rodamiento/Rolamento/Palier/Bearing (608-22).	1
17	Rodamiento/Rolamento/Palier/Bearing (6003-RS).	1
18	Anillo de seguridad/Anel de seguranta/Anneau de sécurité/Safety ring. (017*1).	1
19	Anillo de seguridad/Anel de seguranta/Anneau de sécurité/Safety ring. (0 35).	1
20	Husillo doble engranaje/Fuso engrenagem dupla/Broche double engrenage/Spindle double gear.	1
21	Rodamiento/Rolamento/Palier/Bearing (699-22).	1
22	Pin ubicación/localizac:5o do pino/Emplacement des broches/Locating pin (0 s*10).	2
23	Caja engranajes/Caixa velocidade/Boite vitesses/Gear box.	1
24	Anillo estanqueidad/Anel veda 3o/Bague d'étanchéité/Seal ring (12122* 12110*1,5).	1
25	Rodamiento/Rolamento/Palier/Bearing. (6000-22).	1
26	Rotor/Rotor/rotor/Rotor. (12148.50).	1
27	Rodamiento/Rolamento/Palier/Bearing. (608-22).	1
28	Tapa rodamiento/Tampa rolamento/couvercle palier/Bearing cover.	1
29	Cortina 2/Cortina 2/Rideau 2/Coulisse 2. (Q235).	1
30	Muelle/Mola/Ressort/Spring.	2
31	Cortina 1/Cortina 1/Rideau 1/Coulisse 1. (Q235).	1
32	Pin ubicación/localiza ao do pino/Emplacement des broches/Locating pin (0 G*ao).	1
33	Cable/Cabo/Cable/Cable. (H07RH-F).	1
34	Tornillos/Parafusos/Des vis/Screws (ST4X16).	12
35	Mango inferior/Alta inferior/Poignée inférieure/Botton handle.	1
36	Regulador velocidad/Regulador velocidade/Régulateur vitesse/Sr>eed adjuster.	1
37	Mango superior/Ala superior/Poignée supérieure/Top handle.	1
38	Interruptor/Interruptor/Commuteur/Switch.	1
39	Protector del cable/Protetor de cabo/Protecteur de cable/Cable cover.	1
40	Tornillos/Parafusos/Des vis/Screws (ST4X14).	2
41	Suietacable/Bracadeira/Attache de câble/Cable plate.	1
42	Muelle/Mola/Ressort/Spring.	1
43	Condensador/condensador/Condenseur/Ca pac itor (0.33µFM ~ 2-2 SOV).	1
44	Tornillos/Parafusos/Des vis/Screws (ST5X70).	2
45	Estátor/Estator/Stator/Stator.	1
46	Etiqueta/Rótulo/EtiQuette/Label.	1
47	Cubierta motor/Capa motor/couvercle motor/Motor cover.	1
48	Etiqueta/Rótulo/Etiquette/Label.	1
49	Escobillas/Escovas/Brosses/Carbon brushes.	2
50	Porta escobillas/Porta escova/Porte-balais/Brush holder.	2
51	Tapa escobillas/lampa escovas/Couvercle brosses/Brushes cover.	2
52	Tornillos/Parafusos/Des vis/Screws (ST3X10).	2
53	Arranque suave/Inicio suave/Oémarrage progressif/Soft start.	1
54	Cubierta trasera/Contracapa/Cache arrieref/Rear cover.	1
55	Tornillos/Parafusos/Des vis/Screws (ST4X16).	4
56	Varilla mezcladora/Vareta de mistura/Pale de mélange/Mixer paddle. (0140 x 600).	2 pzs.
57	Llave fija/chave fixa/Clé fixe/Spanner.	1
58	Tornillo/Parafuso/Des vis/Screw (ST5X16).	1