


MX1600N MX1800N

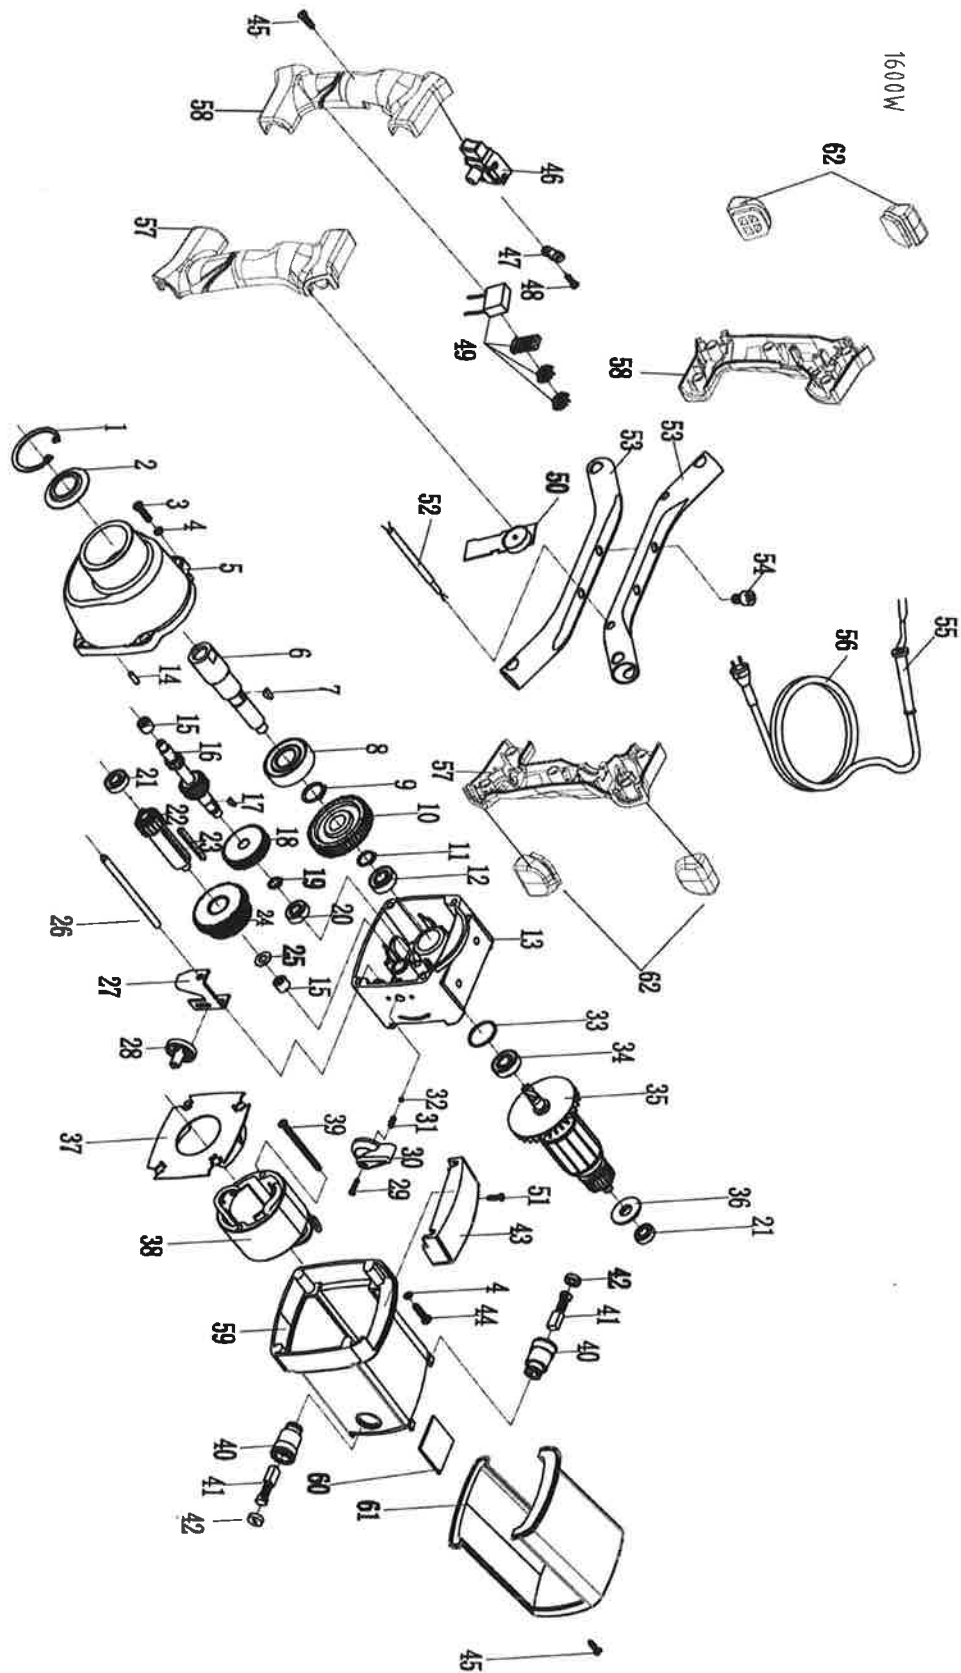

spare parts list MX1600N MX1800N

NO.	Description	NO.	Description
1	Safety ring $\varnothing 47$	32	Steel ball $\varnothing 4$
2	Dust cover	33	Sealring $\varnothing 28 \times 1.9$
3	Screw M5X20	34	Ball Bearing 6001 2RS
4	Spring washer $\varnothing 5$	35	Rotor
5	Bearing cover	36	MG insulation gasket
6	output shaft	37	Airguide shim
7	Hemicycle key 4X5X12	38	Stator
8	Bearing 6204 ZZ	39	Screw ST5X65
9	Safety ring $\varnothing 20$	40	Brush
10	Spindle gear	41	Carbon brush
11	Safety ring $\varnothing 15$	42	Brush cap
12	Bearing 6000ZZ	43	Clamp
13	Gear box	44	Screw M5X25
14	Pin 4*12	45	Screw ST3.9X20
15	Needle bearing HK0810	46	Switch
16	The second active gear shaft	47	Clamp
17	Hemicycle key 2.5X3.7X10	48	Screw ST3.5X16
18	First driven gear	49	Capacitance
19	Safety ring $\varnothing 10$	50	Circuitry board
20	Ball bearing 698 zz	51	Screw ST3.5*18
21	Ball bearing 608 zz	52	Cable
22	Third active gear shaft	53	Steel pipe
23	Parallel key 4×4×45	54	Screw M8X12
24	Spindle double gear	55	Cable sleeve (Big)
25	Flat washer $\varnothing 16 \times 8 \times 0.8$	56	Power Cord
26	Pivot $\varnothing 6 \times 106$	57	Left Handle
27	Coulisse	58	Right handle
28	Partial core + eccentric wheel core	59	Motor housing
29	Screw ST3X16	60	Controler
30	Lever	61	Rear cover
31	Spring $\varnothing 0.5 \times \varnothing 3.9 \times L12$	62	Protection Angle